


Learning Environments user guide: DVD/VCR combo units

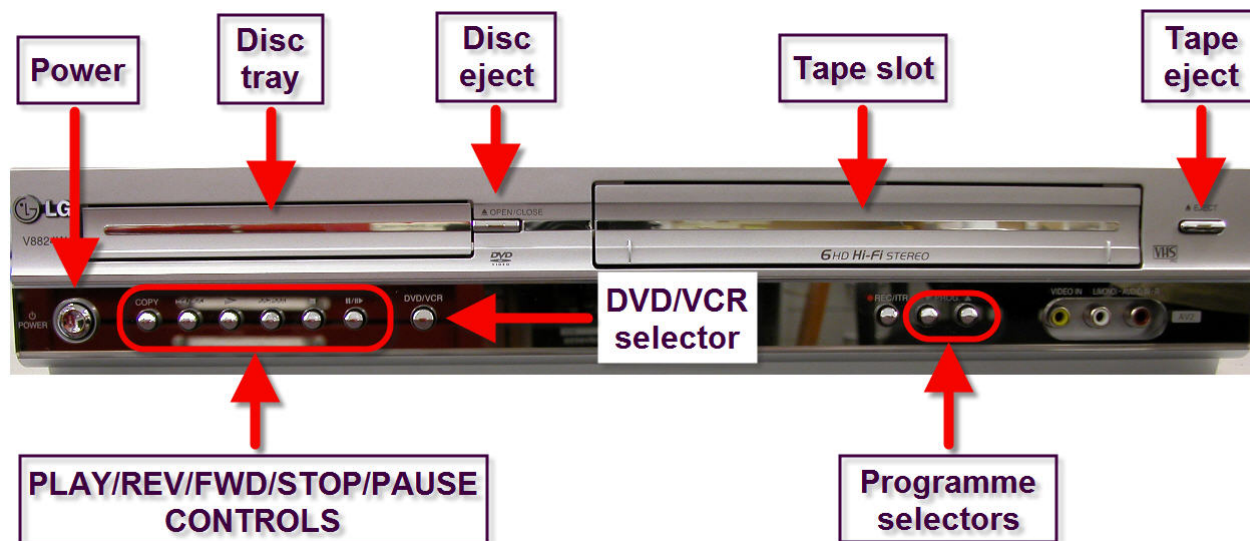

- DVD/VCR's use one set of controls to operate both DVD & VCR.
- Use the **DVD/VCR** selector button to toggle between controlling the DVD or VCR portion of the unit.

NOTE: The unit is in DVD mode when a large LG logo is displayed on the screen (if no DVD is present); it is in VCR mode when the screen is a plain dark blue.

- Use the **PLAY**, **STOP**, reverse (**REV**) and fast forward (**FWD**) buttons to control your disc or tape, as with a regular DVD or VCR.

What can the DVD/VCR combo units play?

DVD/VCR combo units can play:

- PAL & NTSC tapes
- DVDs from all regions
- DVD-R's
- DVD-RW's
- VCD's
- Audio CD's
- SVCD's
- Kodak Picture CD's
- CD-R's & CD-RW's that contain audio titles, MP3, WMA or JPEG files.

Playing a DVD

1. Turn on the TV monitor.
2. Select the AV channel on the TV.
3. Press the **OPEN/CLOSE** button to open the disc tray.
4. Place the disc in the tray with the label facing up.
5. Press the **OPEN/CLOSE** button again to close the tray.

The combo unit will automatically switch to DVD mode when you load a disc - otherwise press the **DVD/VCR** button to toggle between DVD & VCR playback mode.

NOTE: The unit is in DVD mode when a large 'LG' logo is displayed on the screen (if no DVD is present); it is in VCR mode when the screen is a plain dark blue.

6. Playback should start automatically when you load a disc - if not press the **PLAY** button.

Using DVD menus

The menu screen will be displayed if the disc you are playing has menu functionality.

- Use either the program selector arrows on the unit or the arrow buttons on the remote control to select the menu item you require.
- Pressing **PLAY** selects your highlighted choice.

Playing a video tape

1. Turn on the TV monitor.
2. Select the AV channel on the TV.
3. Load your video tape into the tape compartment.

The combo unit will automatically switch to video mode when you load a tape - otherwise press the **DVD/VCR** button to toggle between DVD & VCR playback mode.

NOTE: The unit is in VCR mode when the screen is a plain dark blue; it is in DVD mode when a large 'LG' logo is displayed (if no DVD is present).

4. Use the controls on the front panel of the video player, or the remote control, to play your video tape.

Report any errors or omissions in this user guide to:

les-guides@unimelb.edu.au

The University of Melbourne has used its best endeavours to ensure that material contained in this publication was correct at the time of printing. The University gives no warranty and accepts no responsibility for the accuracy or completeness of information and the University reserves the right to make changes without notice at any time in its absolute discretion. Users of this publication are advised to reconcile the accuracy and currency of the information provided with the relevant department of the University before acting upon or in consideration of the information. Copyright in this publication is owned by the University and no part of it may be reproduced without the permission of the University